
BRUSHLESS PROPULSION / TECHNICAL MANUAL

H6

High-voltage brushless motor

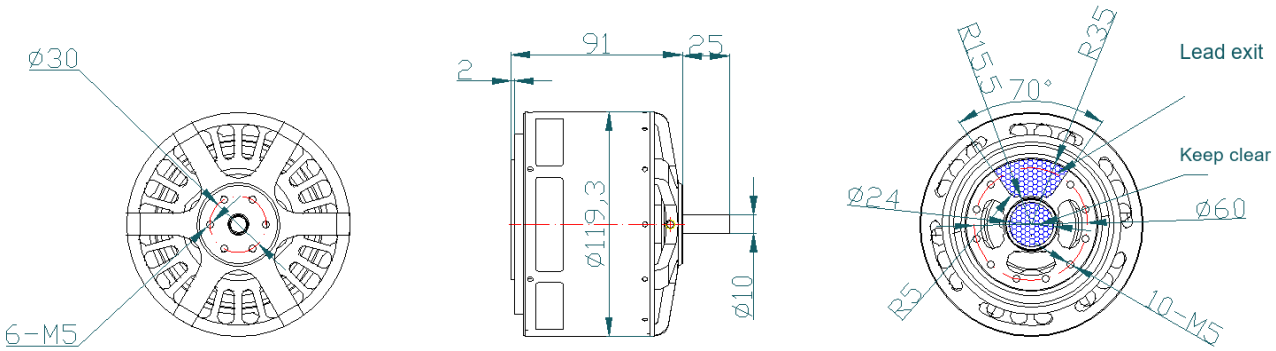

Engineering reference / Selection and integration

INPUT VOLTAGE	RATED INPUT	MOTOR MASS
200-400 V DC	**9 A**	**2750 ± 10 g**

Quality engineering. Service life up to 5000 hours.

Actual life depends on load, temperature, installation and maintenance.

01 / SELECTION

Selection and application

Select H6 around its 200-400 V DC supply range, 9 A rated current and 2750 g ±10 g motor mass. The source test table shows how thrust changes with input power and supports an initial operating-point assessment. Maximum current and peak thrust do not establish continuous-duty capability.

System design

Propulsion performance depends on the motor, ESC, propeller and power supply working together. Changing the propeller changes current, thrust and temperature rise. Start with the test table for the intended propeller and supply, then validate the operating point in the complete system.

Selecting a configuration

Define take-off mass, rotor count, hover thrust, peak mission load and supply range before selecting a motor. Allow current and thermal headroom and check the shaft, mounting pattern, propeller hub and wiring. Do not treat maximum tabulated thrust as sustained hover capability.

01 / SPECIFICATIONS

Specifications and inspection

Input voltage range: 200-400 V DC. Product, installation and operating guidance for brushless motor systems.

No.	Parameter	Specification	Source inspection notes
1	Rated voltage	400 V	Factory inspection
2	Rated input current	9 A	Factory sampling: dynamometer
3	No-load current (200 V)	0.1 A	Factory inspection: ammeter
4	Maximum current	19 ± 0.5 A	Factory inspection: tachometer (source wording)
5	Internal resistance (temperature-dependent)	0.6 ± 0.1 Ω	Factory inspection: DC low-resistance sorter
6	Motor mass	2750 ± 10 g	Factory sampling: electronic counting scale
7	Rotation (shaft-end view)	CW / CCW	
8	Operating temperature	-10 to 65 °C	
9	Storage temperature	-10 to 50 °C	
10	Storage humidity	≤85%	


Test and inspection conditions

Ambient temperature: 25 ± 5 °C. Temperature rise: ≤65 °C. Conduct mechanical vibration testing as required; no-load vibration velocity must not exceed 1.8 mm/s.


After insulation treatment, apply DC1000 / 5S / 5mA between the winding ("rotor winding" in the source) and housing, with no flashover. Test notation and inspection equipment names follow the source.

02 / DIMENSIONS


Dimensions and mounting

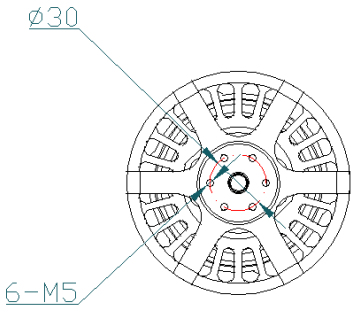

Propeller mounting holes

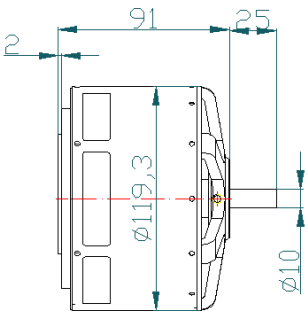


Motor outline

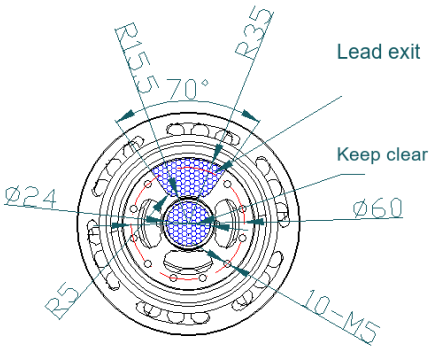


Motor mounting holes

Geometry, hole patterns, threads and angles follow the revised source drawing. Check the actual model, propeller mount and approved drawing before installation. Do not infer dimensions from the illustration scale.


Optional base and accessories

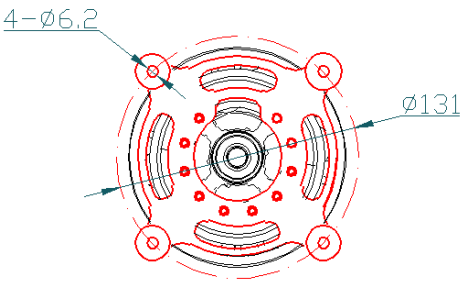

Optional base

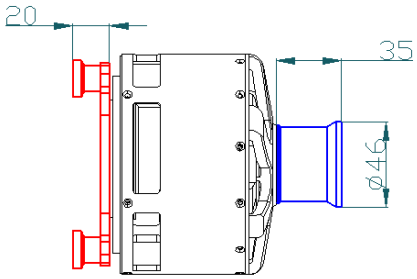

Accessory arrangement

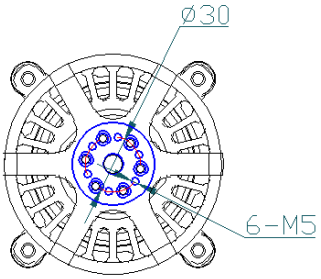


Optional propeller mount

Whether optional accessories are supplied depends on the mutually confirmed configuration.

02 / WIRING

Wiring and rotation

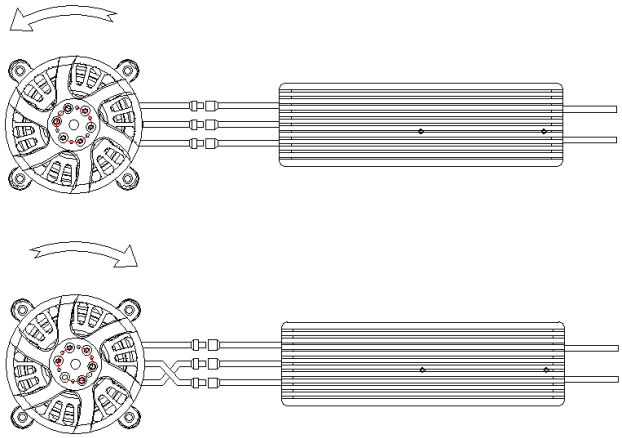

1. Confirm the rotation required by the propeller.

2. Leave the propeller off. Connect the three motor phase leads to the ESC outputs.

3. Check rotation safely. To reverse it, isolate power and confirm safe discharge, then swap any two phase leads.

4. Install the propeller only after verifying rotation.

Installation and system verification

01 After installation, increase load gradually in a controlled test area. Record voltage, current, speed, thrust, vibration and temperature, and check fasteners.

02 Match the motor, ESC, propeller and power supply. Recheck the operating point and temperature rise after changing the propeller or supply conditions.


03 Stop immediately if abnormal noise, vibration, overheating or binding occurs. Maximum test values are not continuous-duty ratings.

03 / PERFORMANCE 01

Performance test / 01

No-load speed: 5250 rpm | Propeller: 36*12 (wood) | Test voltage: 384 V

No.	Current / A	Input / W	Thrust / g	Torque / N·m	Speed / rpm	Motor eff. / %	Thrust eff. / g/W
1	0.9	384.6	3700	1.43	1723	74.6	10.71
2	1.2	460.8	5110	1.89	1856	79.7	11.09
3	2.2	844.8	8540	3.11	2051	79	10.11
4	3	1152	10710	4.01	2211	80.5	9.30
5	6	2304	17550	6.77	2612	80.3	7.62
6	7.4	2841.6	21050	7.9	2812	81.8	7.41
7	9.7	3724.8	26060	9.68	3012	81.9	7.00
8	11.7	4492.8	30210	11.87	3124	86.4	6.72
9	15.2	5836.8	35940	13.11	3221	75.7	6.16
10	18.4	7065.6	41620	15.17	3215	72.2	5.89

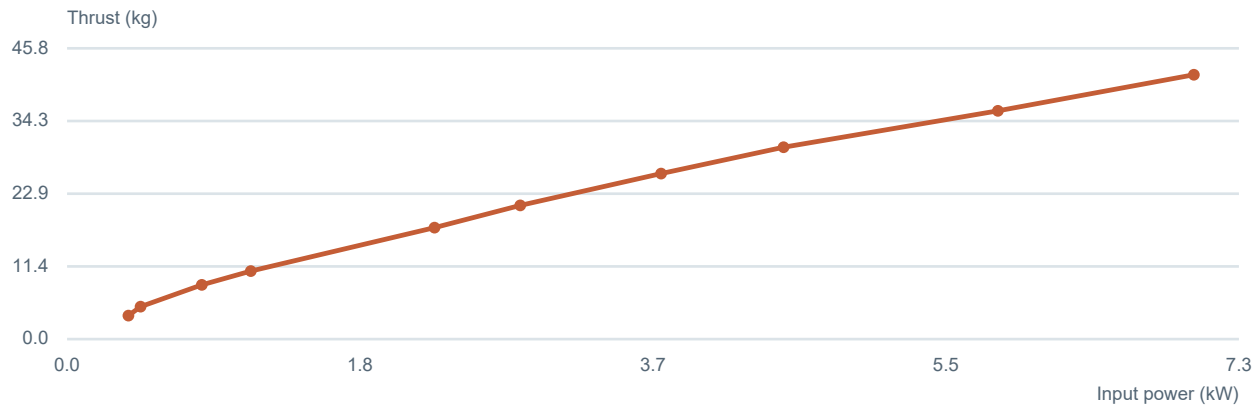

Rows retain the revised source values. The curve plots listed input power and thrust. Test points do not establish continuous-duty ratings; propeller notation follows the source.

The source first row lists 384 V, 0.9 A, 384.6 W, 3700 g and 10.71 g/W. Voltage multiplied by current differs from the listed power. Source values are retained without recalculation.

04 / INTEGRATION

Integration and maintenance

Installation and integration

Isolate power and confirm safe discharge before wiring. Check rotation without a propeller; to reverse it, isolate power again and exchange any two phase leads. With the propeller fitted, increase load gradually in a controlled test area and record voltage, current, speed, thrust, vibration and temperature; inspect fasteners.

Operation and maintenance

Stop for abnormal noise, vibration, overheating or binding. Never carry the motor by its leads or shaft; do not continue using the motor after a drop. The documentation requires bearing temperature below 100 °C in the worst case. Service life up to 5000 hours remains dependent on load, temperature, installation and maintenance.

Delivery verification record

01 Confirm model, configuration, software and document versions.

02 Record load, environment, power supply and duty conditions.

03 Verify protection, stopping and response to abnormal conditions.

04 Retain key parameters, photographs and inspection records, and agree a maintenance plan.

04 / OPERATION & CARE

Safety, operation and care

Installation, wiring and commissioning require competent personnel. Isolate power and confirm safe discharge before changing connections.

01 Supply voltage, service life and environmental conditions may cause short circuits, fire or smoke. Provide appropriate protection in the complete machine. If safety is in doubt, stop use and contact technical support for inspection.

02 Do not damage windings, leads, edges or insulation during installation and wiring; damage may cause electric shock, burnout or fire. Never touch rotating parts with hands or fingers while energized; injury may result.

03 The motor is intended for installation in other equipment and does not carry machine-level warning labels. Contact technical support if labels are needed and provide guarding appropriate to the complete machine.

04 Temperature strongly affects service life. Keep the worst-case bearing temperature below the allowable upper limit of 100 °C. If measurement is not possible, verify life in the complete machine. Do not sustain a locked rotor or high bearing temperature: bearing deterioration causes noise, vibration and reduced life.

05 For custom speed control, check supply-voltage range, load variation and other changing conditions for abnormal noise, overheating or stalling.

06 Use the correct mounting method. Incorrect mounting causes noise and vibration and can shorten bearing life.

07 Never carry the motor by its leads or shaft. After a drop or equivalent impact, do not continue using it: insulation or bearings may be damaged.

08 Do not disassemble the motor. Safety and other performance are not assured after unauthorized disassembly.

09 Avoid the corrosive or harmful substances listed in the source: H_2O, SO_2, NO_2, Cl_2, and silicone-, cyano- and phenol-based substances. Check for these substances inside the complete machine before installation to prevent rust and reduced life.

10 Store away from those gases and harmful environments at -10 to 50 °C and no more than 85% relative humidity. Take particular care during extended storage. Sealed storage is required, for no more than six months under normal temperature and humidity conditions.

05 / SPECIFICATION AGREEMENT

Specification agreement and notes

01 The integrator must confirm compatibility with the complete machine in structure, dimensions, service life, noise, vibration and performance.

02 Operation outside the specified limits is outside the original specification guarantee.

03 Contact technical support before changing the machine specification or using the motor in another product.

04 Specification changes affecting performance or characteristics require samples and verification against mutually confirmed documents before implementation.

05 Within the agreed specification limits, components may be changed to improve performance without separate notice. Record critical delivery requirements in the mutually confirmed documents.

06 Agree in advance on any necessary requirements not addressed in this manual.

07 Resolve compatibility issues by mutual agreement using the confirmed specification documents as the basis.

Source-data notes

The source first row lists 384 V, 0.9 A, 384.6 W, 3700 g and 10.71 g/W. Voltage multiplied by current differs from the listed power. Source values are retained without recalculation.

Source basis: revised manual supplied on 28 September 2026. Values, units and tolerances follow that edition. Use mutually confirmed delivery documents for ordering and acceptance.

Business enquiries

Product selection · Project enquiries · Technical support

H6

Zhuhai SV Tech Co. Ltd.

ADDRESS 35 Jinzhou Road, Jinding, Xiangzhou District, Zhuhai, Guangdong, China

CONTACT **Mr. Liu**

PHONE **+86 18688194199**

EMAIL **lhc1983@gmail.com**

Quality engineering. Service life up to 5000 hours.

Actual life depends on load, temperature, installation and maintenance.